BARTIMPORT.PL

POWER TEC

# Industrial fan heater EL 2

## User manual

## Introduction

To get the most out of your new fan heater, please read through these instructions and the attached safety regulations before use. Please also save the instructions in case you need to remind yourself of the fan heater's functions at a later date.

## Technical specifications

| | |
|---|---|
| Voltage/frequency: | 230V ~ 50Hz |
| Power rating: | 2000 W |
| Settings: | 3 (650 W, 1300 W and 2000 W) |
| Temperature: | Continuously adjustable 0-85 ℃ |
| Dim.: | 197x210x303mm |
| Weight: | 4.2 kg |

Requires at least a 10 A fuse
Housing of steel plate and heat-resistant lacquer
Supplied complete with cord and plug

## The fan heater dials

1. Function selector with three power settings
2. Thermostat dial

## THERMOSTAT INSTRUCTIONS

- At first turn the thermostat to "Max" and let the heater operate with full power input. When the room temperature reaches the required value, turn the thermostat to left until it switches off.
- The thermostat will then switch on and off automatic to control the room temperature according to the preset value and keep the room temperature constant.
- When using the heater for the first time, you may notice a slight emission of smoke. This is quite normal and it stops after a short time. The heating element is made of steel and was coated with a layer of protection oil by production. The smoke is caused by the left oil when heated.

## Special safety regulations

• The fan heater is not suitable for use outdoors in damp weather, in bathrooms or in other wet or damp environments.
• Please note that the fan heater can become very hot and should, therefore, be placed at a safe distance from flammable objects such as furniture, curtains and similar.
• Do not cover the fan heater.
• Do not place the fan heater immediately under a wall socket.
• Do not connect the fan heater using an on/off timer or other equipment which can automatically switch the device on.

• The fan heater must not be placed in rooms where flammable liquids or gases are used or stored.
• If an extension cord is used, it must be as short as possible and always be fully extended.
Children should be supervised to ensure that they do not play with the appliance. The appliance in not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge. If the appliance is damaged, do not use it any more.
Do not place the appliance on moving vehicles or some where easy to be tipped over.
Use the appliance in places with good air ventilation, do not position it near a wall or corner.
It is recommended that a separate circuit serving only this appliance be provided keep the power cord far enough from the hot air outlet
If the supply cord is damaged, it must be replaced by the manufacturer or service agent or a similarly qualified person in order to avoid a hazard.
• You must not connect other appliances to the same mains socket as the fan heater.
Do not throw the appliance in dustbin with wheels. Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact you local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.

If the fan heater is to be permanently installed, the following instructions must be observed:

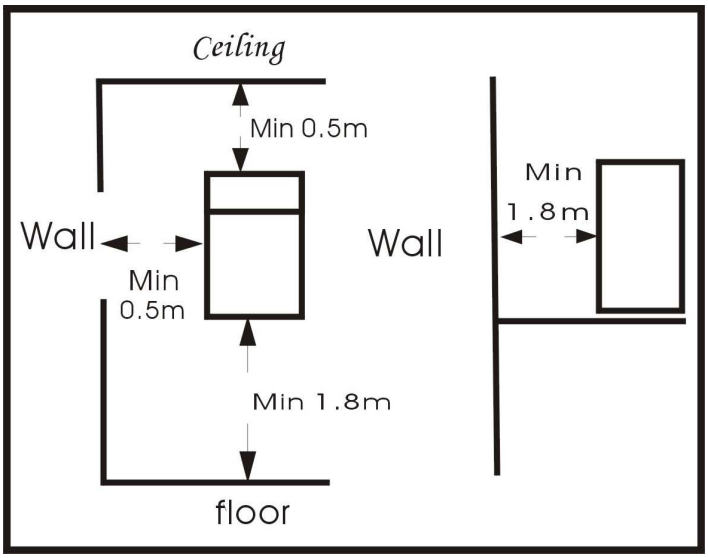


# Use

• Position the fan heater so that it stands upright on a firm surface and at a safe distance from wet environments and flammable objects.

• Connect the fan heater to the mains.
• Set the thermostat dial to the maximum temperature.
• The fan heater will switch on when the function selector is set to one of the three power settings.
• Once the room reaches the required temperature, you should turn the thermostat dial slowly counter-clockwise until the fan heater switches off. The fan heater now starts and stops automatically and thus keeps the room temperature constant.

## Cleaning and maintenance

- Before cleaning the appliance, disconnect it from the socket and let it cool down.
- The enclosure is easily to get dirty, wipe it often with soft sponge. For very dirty parts, wipe with a sponge dipped in < 50□ water and mild detergent, then dry the heater enclosure with clean cloth. Be careful not to let the water enter the appliance inner.
- Don’t splash water onto the heater□never use solvent like gasoline, isoamyl acetate, toluene etc to clean the heater, in order to protect the enclosure.
- Clean the coupler, dry and pack it in a plastic bag.
- When you store the heater, let it cool down first, keep it dry. Then cover it with a plastic bag, put in the packing box and store it in a dry, ventilated place.